

## General Description

The MAX17525 evaluation kit (EV kit) is a fully assembled and tested circuit board that demonstrates the MAX17525 overvoltage, undervoltage, and overcurrent protection device. The EV kit features an external pMOSFET and LED input and output reading. The EV kit comes with the MAX17525ATP+ installed. Request samples from Maxim when ordering the EV kit.

## Features

- 5.5V to 60V Operating Voltage Range
- External pMOSFET Installed
- Proven PCB Layout
- Fully Assembled and Tested

[Ordering Information](#) appears at end of data sheet.

## Quick Start

### Required Equipment

- MAX17525 EV kit
- 40V DC power supply
- 5V DC power supply
- Multimeter

### Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation:

- 1) Verify that all jumpers are in their default positions.
- 2) Set the 40V DC power supply to 10V and connect to  $V_{IN}$  (TP1).
- 3) Connect the 5V DC power supply to VIO (TP21).
- 4) Turn on both power supplies. Verify that LED1 is on, and  $\overline{FLAG}$  (TP15) is 0V.
- 5) Increase voltage on the DC power supply to TP1 and verify that LED2 turns on when voltage reaches ~12.4V. Also check that voltage on  $V_{OUT}$  (TP5) is ~12.4V and  $\overline{FLAG}$  (TP15) is 5V.
- 6) Increase voltage on the DC power supply to TP1 and verify that LED2 turns off when voltage reaches ~36.2V. Also check that voltage on  $V_{OUT}$  (TP5) goes down and  $\overline{FLAG}$  (TP15) is 0V.
- 7) Decrease voltage on the DC power supply to TP1 and verify that LED2 turns on when voltage reaches ~34.1V. Also check that voltage on  $V_{OUT}$  (TP5) is ~34.1V and  $\overline{FLAG}$  (TP15) is 5V.
- 8) Decrease voltage on the DC power supply to TP1 and verify that LED2 turns on when voltage reaches ~12V. Also check that voltage on  $V_{OUT}$  (TP5) goes down and  $\overline{FLAG}$  (TP15) is 0V.

### Detailed Description of Hardware

The MAX17525 EV kit is a fully assembled and tested circuit board demonstrating the MAX17525 overvoltage, undervoltage, and overcurrent protection device in a 20-pin surface-mount TQFN-EP package.

The EV kit also features LEDs to indicate the power for input and output (see [Table 1](#)).

**Table 1. LED Indicator (LED1, LED2)**

LED	DESCRIPTION
LED1	LED1 is on when IN is powered
LED2	LED2 is on when OUT is powered

**Table 2. Enable Inputs Jumper Settings (JU1, JU12)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU1	1-2	$\overline{\text{HVEN}}$ is connected to VIN
	2-3*	$\overline{\text{HVEN}}$ is connected to GND
JU12	Installed	EN is high
	Not installed*	EN is low

\*Default position.

**Table 3. Enable Inputs Switch Status**

EN	$\overline{\text{HVEN}}$	SWITCH STATUS
0	0	On
1	0	On
0	1	Off
1	1	On

**Table 5. UVLO Threshold Jumper Settings (JU4, JU6)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU4	Installed*	UVLO is connected to ground; internal UVLO threshold is used (do not install JU6)
	Not installed	UVLO is open
JU6	Installed	UVLO is connected to external voltage-divider; use R4/R5 or R7 to set undervoltage threshold (do not install JU4)
	Not installed*	UVLO is open

\*Default position.

### Enable Inputs (EN, $\overline{\text{HVEN}}$ )

Use jumpers JU1 and JU12 to enable the device (see [Table 2](#) for jumper settings and [Table 3](#) for enable switch status).

### Overvoltage-Lockout Threshold (OVLO)

Use jumpers JU3 and JU5 to select internal or external OVLO threshold. Install a shunt on either JU3 or JU5, but not both at the same time (see [Table 4](#) for jumper settings).

### Undervoltage-Lockout Threshold (UVLO)

Use jumpers JU4 and JU6 to select internal or external UVLO threshold. Install a shunt on either JU4 or JU6, but not both at the same time (see [Table 5](#) for jumper settings).

**Table 4. OVLO Threshold Jumper Settings (JU3, JU5)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU3	Installed*	OVLO is connected to ground; internal OVLO threshold is used (do not install JU5)
	Not installed	OVLO is open
JU5	Installed	OVLO is connected to external voltage-divider; use R2/R3 or R6 to set overvoltage threshold (do not install JU3)
	Not installed*	OVLO is open

\*Default position.

**Current-Limit Threshold**

Use jumpers JU7–JU10 to use different resistors to program the current-limit threshold (see [Table 6](#) for jumper settings).

**Reverse-Current Blocking**

RIPEN is internally pulled up. Use JU13 to enable/disable reverse current-blocking (see [Table 7](#) for jumper settings).

**Table 6. Current-Limit Threshold Jumper Settings (JU7–JU10)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU7	Installed*	SET1 is connected to ground with a 62kΩ resistor (~0.6A current limit)
	Not installed	SET1 is not connected to ground with a 62kΩ resistor
JU8	Installed	SET1 is connected to ground with a 13kΩ resistor (~2.9A current limit)
	Not installed*	SET1 is not connected to ground with a 13kΩ resistor
JU9	Installed	SET1 is connected to ground with a 6.8kΩ resistor (~5.5A current limit)
	Not installed*	SET1 is not connected to ground with a 6.8kΩ resistor
JU10	Installed	SET1 is connected to ground with a 100kΩ potentiometer (programmable current limit)
	Not installed*	SET1 is not connected to ground with a 100kΩ potentiometer

\*Default position.

**Current-Limit Mode**

Use jumpers JU14 and JU15 to select the current-limit mode (see [Table 8](#) for jumper settings).

**Table 7. Reverse-Current Blocking Jumper Settings (JU13)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU13	Installed	RIPEN is low (disable)
	Not installed*	RIPEN is high (enable).

\*Default position.

**Table 8. Current-Limit Type Jumper Settings (JU14, JU15)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU14	Installed*	CLTS2 is low
	Not installed	CLTS2 is high
JU15	Installed	CLTS1 is low
	Not installed*	CLTS1 is high

\*Default position.

**Table 9. Current-Limit Type Select (CLTS1, CLTS2)**

CLTS2	CLTS1	CURRENT-LIMIT TYPE
0	0	Latchoff mode
0	1	Autoretry mode
1	0	Continuous mode
1	1	Continuous mode

## Component Suppliers

SUPPLIER	WEBSITE
Bourns, Inc.	www.bourns.com
Lite-On, Inc.	www.us.liteon.com
Lumex North America	www.lumex.com
ON Semiconductor	www.onsemi.com
Vishay Americas	www.vishay.com

**Note:** Indicate that you are using the MAX17525 when contacting these component suppliers.

## Component Information, PCB Layout, and Schematics

See the following links for component information, PCB layout diagrams, and schematic.

- [MAX17525 EV BOM](#)
- [MAX17525 EV PCB Layout](#)
- [MAX17525 EV Schematic](#)

## Ordering Information

PART	TYPE
MAX17525EVKIT#	EV Kit

#Denotes RoHS compliant.

### Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	6/16	Initial release	—

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at [www.maximintegrated.com](http://www.maximintegrated.com).



*Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.*













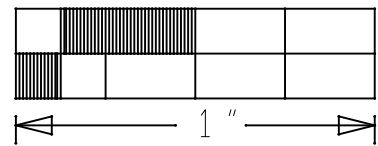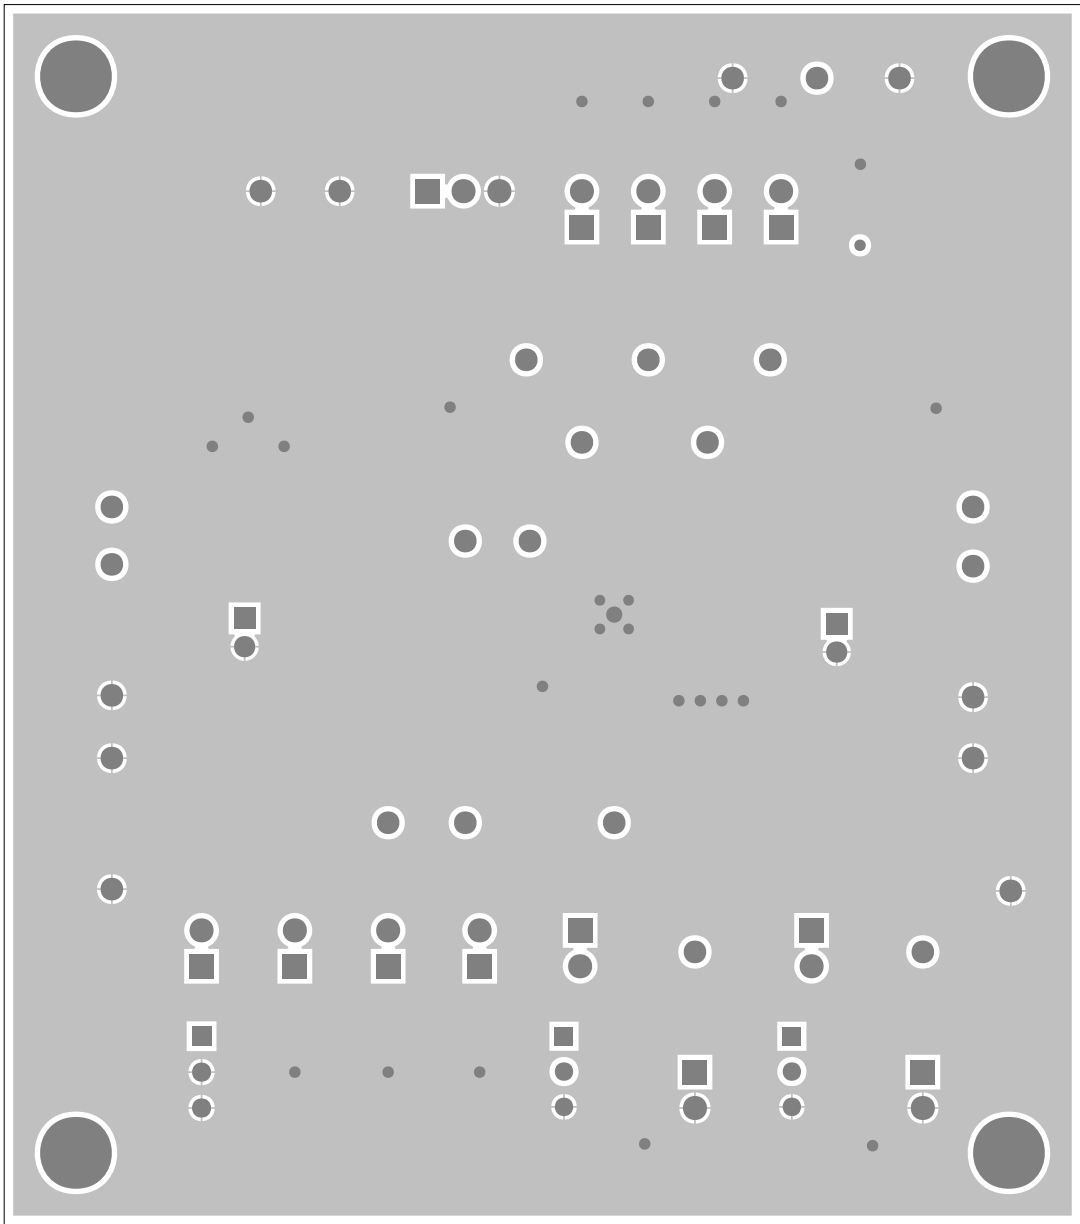

**INTERNAL 2**

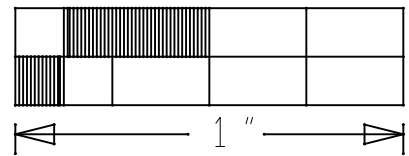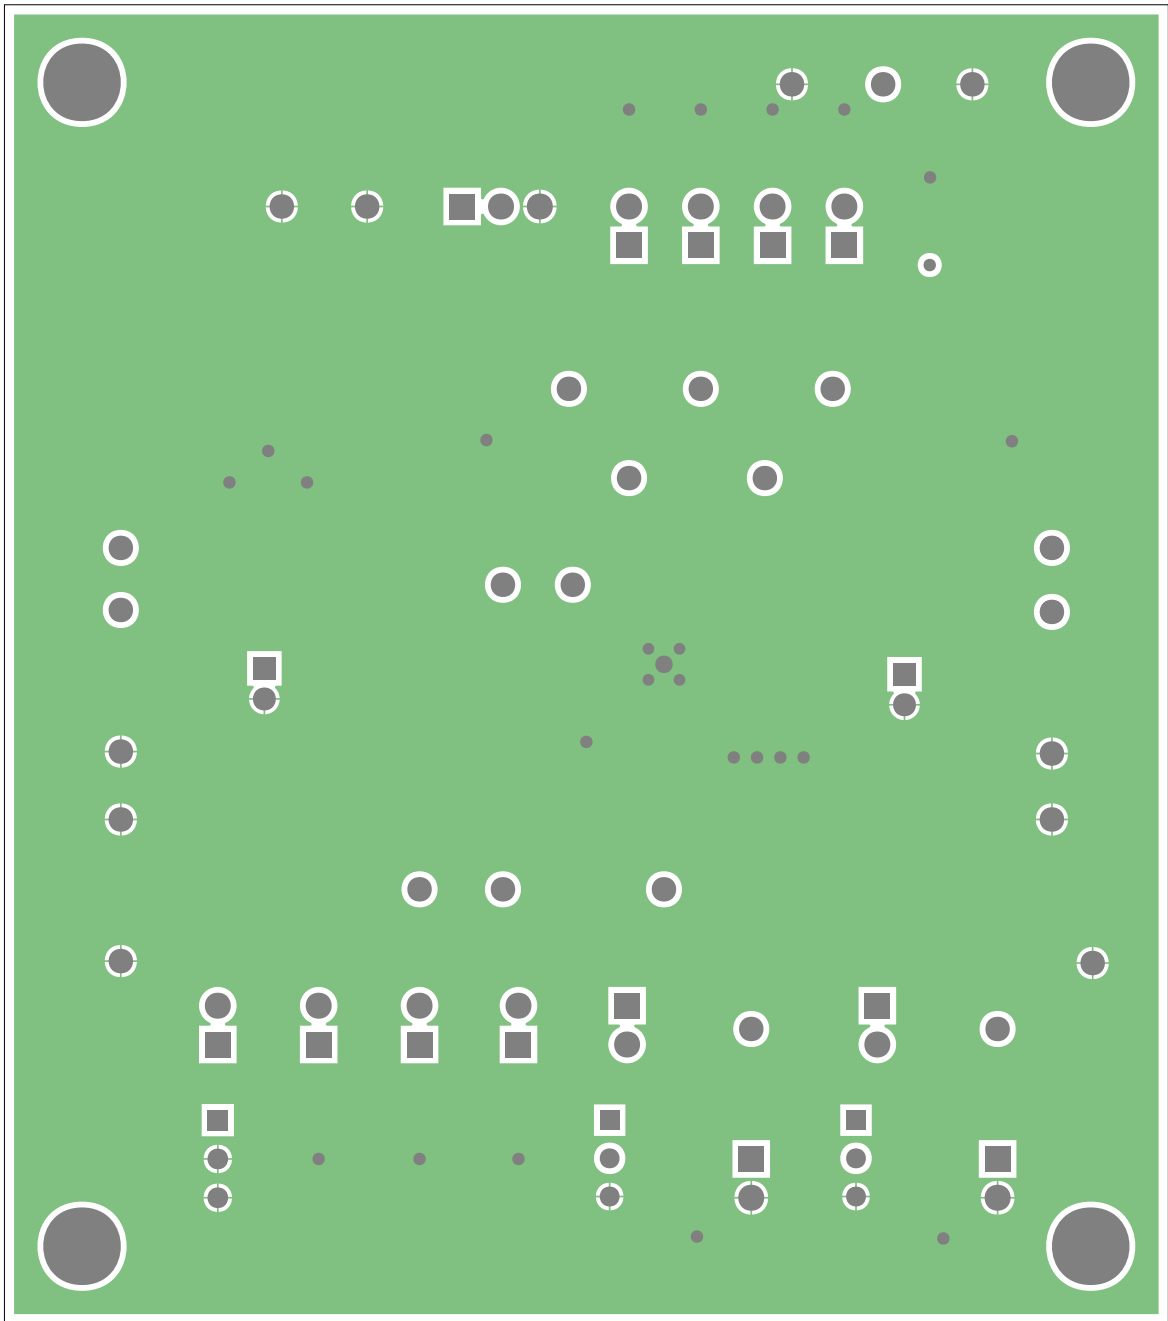

**INTERNAL 3**

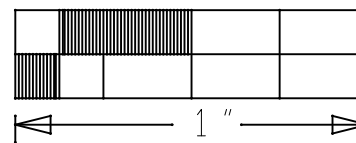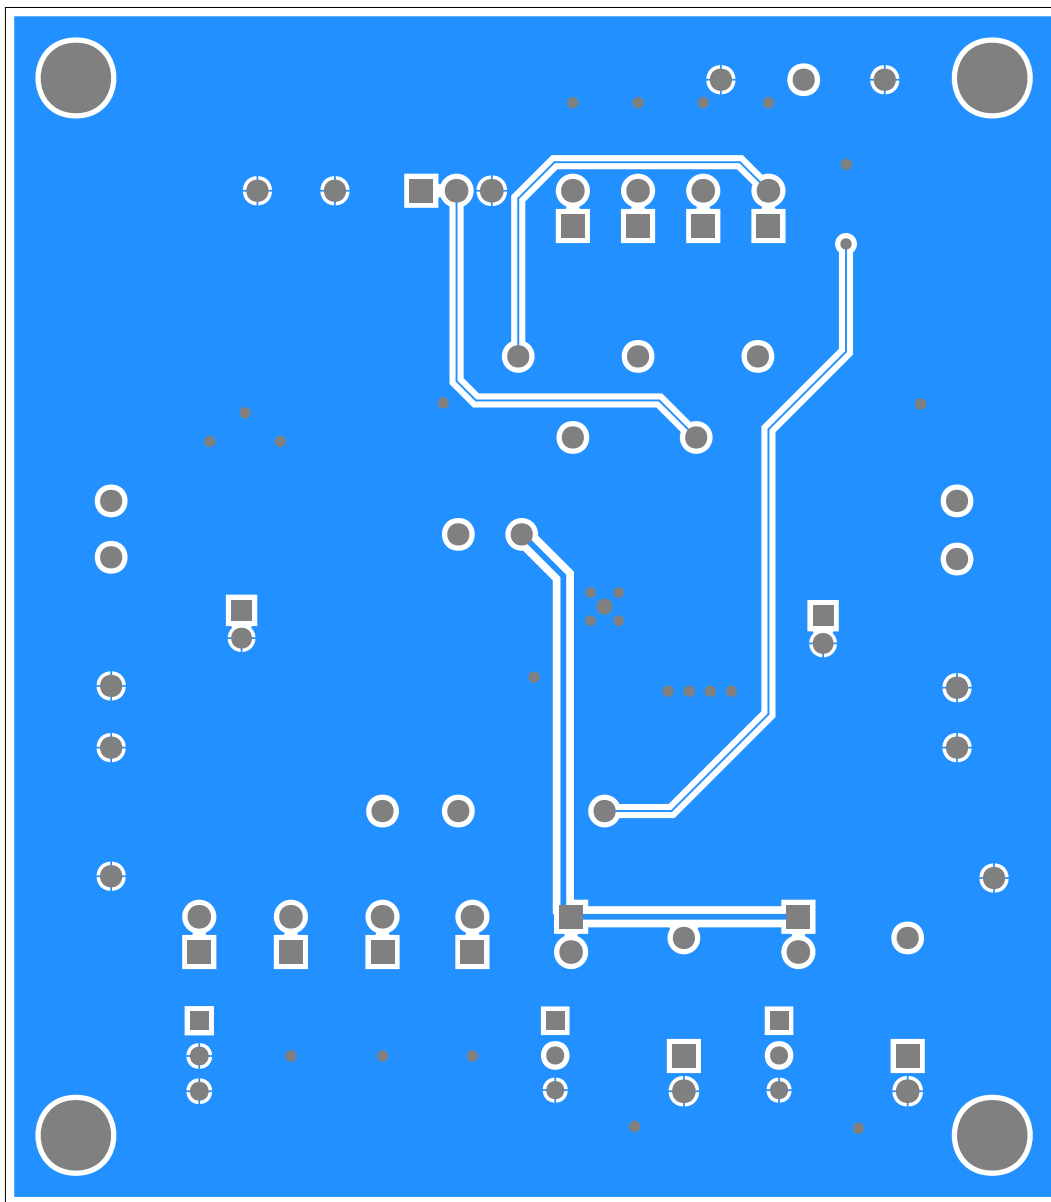

**BOTTOM**

